 
 


FLINT & WALLING 1 PHASE CONTROL BOX COMPONENTS

 
(For Pricing Refer To Repair Parts Price List FW0005)

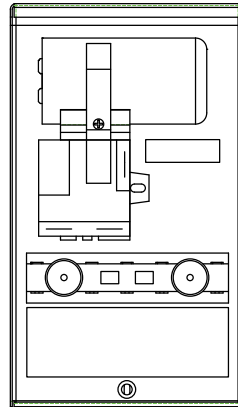


Start capacitor



Run capacitor

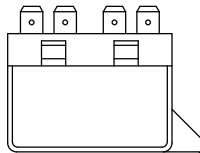

Relay

 

Overload Start Type 2



Overload Main Type 3

IL1935

	1/2 HP		3/4 HP	1 HP	1-1/2 HP	2 HP
	115V	230V	230V	230V	230V	230V
Control Box P/N	022875	022876	022877	022878	022879	022880
Start Cap	024565	024566	024567	024568	024568	024568
Run Cap	N/A	N/A	N/A	N/A	024569	024570
Relay	024571	024572	024572	024572	024572	024572
230V Main Overload	N/A	N/A	N/A	N/A	024573	024574
230V Start Overload	N/A	N/A	N/A	N/A	N/A	024575